


User Instructions: LVT2 Application 2.

To attach the Vertical Blind Tie Backs to a surrounding structure with no recess for vertical blinds that hang from a head rail:

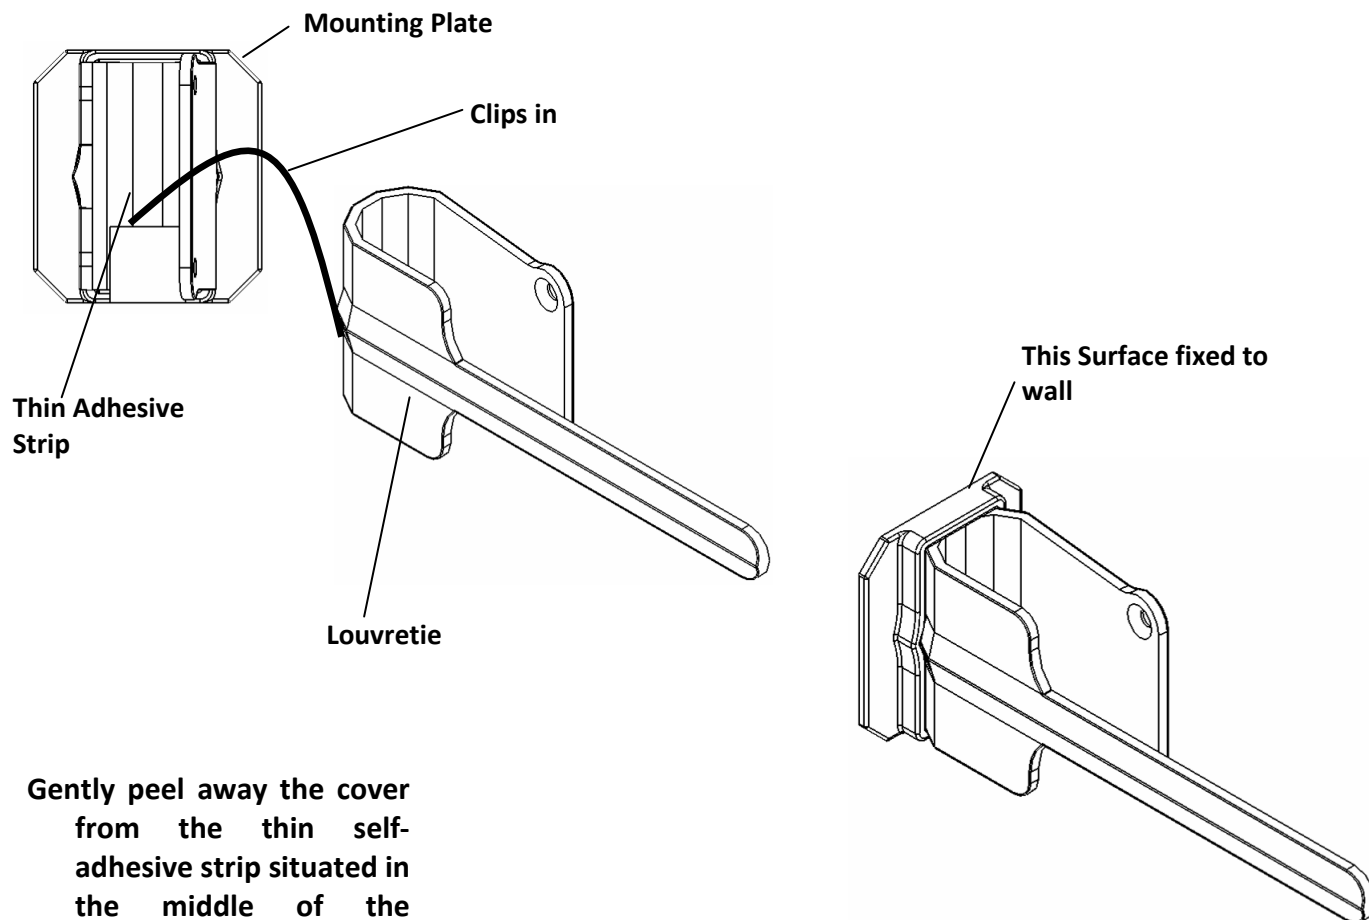

Gently peel away the cover from the thin self-adhesive strip situated in the middle of the Mounting Plate.

Hook the curved edge of the Tie Back under the large clip on the Mounting Plate and push up. Once pushed up, gently press down to lock into the smaller clip.

Gently peel away one side of the self-adhesive pad and fasten to the back of the Mounting Plate applying pressure to hold into position.

Gently peel away the self-adhesive pad cover and stick the Tie Back to your required area/surface.

Please make sure the area/surface has been cleaned and dried thoroughly before application.



Cleaning and Maintenance:

Can be wiped clean using a clean damp cloth.